

ENTTEC Pty/Ltd
ACN 089 252 791
ABN 94 388 357 479
17/5 Samantha Ct
Knoxfield, Vic, 3180
Australia

Tel +61 3 9763 5755
Fax +613 9763 5688
Web: www.enttec.com



DATAGATE MK2 – HOW TO ACCESS FAN CONTROLS

NOTE

Reconfiguring the fan on a Datagate Mk2 should not be attempted in environments that are prone to high heat or humidity. In those cases, the fan is essential to the longevity of the product. Only in air-conditioned interior settings can this modification be performed without voiding the warranty. If you have any doubts about this at all, please consult Enttec personnel to verify the advisability of this action.

If you are still completely sure you want to proceed, the instructions begin on the next page.

ENTTEC Pty/Ltd
ACN 089 252 791
ABN 94 388 357 479
17/5 Samantha Ct
Knoxfield, Vic, 3180
Australia

Tel +61 3 9763 5755
Fax +613 9763 5688
Web: www.enttec.com



The Fan Controls for Datagate MK2 are available in the "Advanced Settings" section. To access these settings though, you will need the "System Password" which is unique for each system.

This document explains how to access these controls by discovering the System password for Datagate MK2.

System Password: Serial No. + Last 2 Digits of Mac Address found on the Home Page

The screenshot shows the ENTTEC DataGate MK2 web interface. On the left is a navigation menu with options: DataGate Home, Profiles, Settings, Backup+Restore, RDM Tools, Stream Auditor, RDM Sensors, DMX Self-Test, and the IP address 10.10.10.121. The main content area has a blue header 'WELCOME TO DATAGATE MK2' and three sections:

- Network Information ?**

IP Address :	10.10.10.121	(speed 100 Mbps)
Subnet Mask:	255.0.0.0	
Broadcast Address:	10.255.255.255	
Mac Address:	00:D0:69:43:35:71	
Serial No:	2082476	
- System Information ?**

System Status:	Active	<input type="button" value="Stop Engine"/>
Active Profile:	ECW PROFILE	
System Name:	DG_MK2	
Packets per sec :	idle	
- License Information ?**

ETHERNET	✓
MERGING	✓
RDM TOOLS	✗
RDM SENSORS MONITORING	✗
HOT SPARE	✗
STREAM AUDITOR	✗
TRIAL (15 MINS. TIMEOUT)	✓
Real Time Clock	✗



Enter the System password (for this example : 208247671), into the **Advanced Settings** section.

ENTTEC
Entertainment Technology

DATA GATE SETTINGS

Firmware Update ?
Upload New Firmware:

System Customization ?
System Name:
Hovering Help: Enable Disable
Set Web Password: Enable Disable
Enter password:
Confirm password:

Advanced Settings ?
This advanced logging should only be enabled if asked by ENTTEC support
password:

Update Datagate License ?
Upload New License:

Master Password gives you access to system logs, debugging & fan control.

DataGate Home
Profiles
Settings
Backup+Restore
RDM Tools



You can now Enable/Disable Fan control for your Datagate MK2. Once changed the settings are saved, but can be changed again later. (Might take a few seconds for the Fan to turn on/off)